


Bedienung:

1. Bauen Sie das Gerät wie unter „Zusammenbau“ beschrieben zusammen.
Verwendung des Zubehörs:
 - Nutzen Sie die Messereinheit zum Zerkleinern von Gemüse, Obst, Fleisch, Fisch, Tofu, Nüssen etc.
 - Nutzen Sie die Emulgierscheibe zum Verrühren und Aufschlagen von Dressing, Dips, Rührei und Sahne
2. Halten Sie die Motoreinheit während der Nutzung mit einer Hand fest und drücken Sie mit der anderen Hand die gewünschte Geschwindigkeitstaste.

Achtung!

Aufgrund der hohen Anlaufgeschwindigkeit kann sich die Motoreinheit zu Anfang auf dem Behälteraufsatz bewegen.

Fixieren Sie die Motoreinheit aus diesem Grund immer mit einer Hand!

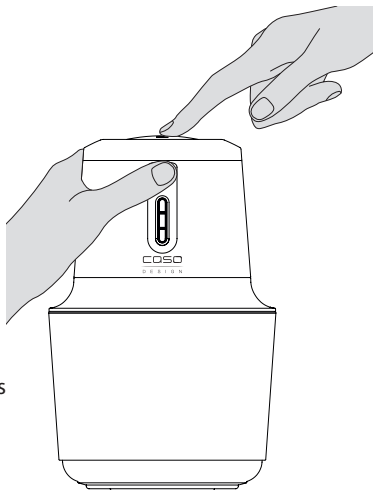

3. Wenn Sie die Taste los lassen, hört das Gerät auf zu arbeiten.
4. Warten Sie nach dem Gebrauch bis die Messereinheit oder die Emulgierscheibe still stehen, bevor Sie die Motoreinheit abnehmen.
5. Entnehmen Sie die Messereinheit oder die Emulgierscheibe vorsichtig und entleeren Sie den Glasbehälter mithilfe des Spatels.
6. Setzen Sie ggf. den Aufbewahrungsdeckel auf den Glasbehälter.

Wahl der Geschwindigkeitsstufe:

Sie haben die Wahl zwischen 2 Geschwindigkeitsstufen. Verwenden Sie je nach ausgewähltem Lebensmittel und gewünschter Konsistenz die Stufe I oder II.
 Stufe I

- Zerkleinern von weichen Früchten und Gemüse wie z.B. Banane, Zwiebel, Knoblauch
- Verrühren von z. B. Rührei, Dressings etc.

Stufe II


- Zerkleinern von harten Früchten (ohne Kerne), hartem Gemüse (wie z.B. Möhren), Fleisch, Nüssen etc.
- Aufschlagen / Schaumig schlagen von z. B. Sahne

Hinweis:

Um den Motor nicht zu überhitzen ist die Anlaufgeschwindigkeit von Stufe 1 und Stufe 2 beim Starten identisch. Nach ca. 3 Sekunden rotiert die Messereinheit / Emulgierscheibe in Stufe 1 langsamer als in Stufe 2.

Reinigung des Zubehörs:

- Vorspülen: Füllen Sie ca. 200 ml lauwarmes Wasser (bei Verwendung der Emulgierscheibe) oder 400 ml lauwarmes Wasser (bei Verwendung der Messereinheit) in den Glasbehälter und geben Sie einen Tropfen eines milden Reinigungsmittels hinzu. Betreiben Sie das Gerät auf Stufe 1 für ca. 20 Sekunden.
- Trennen Sie die Messereinheiten voneinander, indem Sie Messereinheit A gegen den Uhrzeigersinn drehen und von Messereinheit B lösen.
- Alle Zubehörteile können Sie in warmem Spülwasser reinigen. Die Zubehörteile (außer der Glasbehälter) sind spülmaschinengeeignet. Trocknen Sie die Teile nach dem Spülen gut ab.

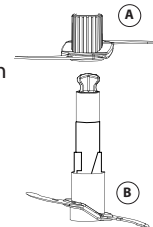

Cordless multi-chopper Chop & Go


Important instructions for operation

Operation:

- Assemble the appliance as described under „Assembly“.
Use of the accessories:
 - Use the blade unit for chopping vegetables, fruits, meat, fish, tofu, nuts, etc.
 - Use the emulsifying disc for blending and whipping dressings, dips, scrambled eggs and cream
- During use, hold the motor unit with one hand and press the desired speed button with the other hand.

Attention!

Due to the high start-up speed, the motor unit may move on the container attachment at the beginning. **Because of this, always fix the motor unit with one hand!**

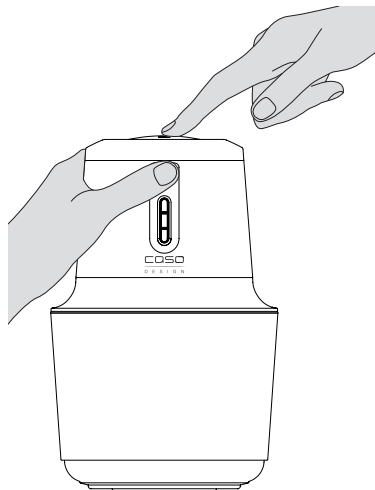

- When you release the speed button, the appliance stops working.
- After use, wait until the blade unit or the emulsifying disc stops before removing the motor unit.
- Remove the blade unit or emulsifying disc carefully and empty the glass container using the spatula.
- If necessary, place the storage lid on the glass container.

Choice of speed level:

You have the choice between 2 speed levels. Use speed I or II depending on the selected food and desired consistency.

Speed I

- Chopping soft fruits and vegetables, e.g. banana, onion, garlic
- Blending of e.g. scrambled eggs, dressings etc.

Speed II

- Chopping hard fruits (without seeds), hard vegetables (such as carrots), meat, nuts etc.
- Whipping of e.g. cream

Please note:

In order not to overheat the motor, the starting speed of speed 1 and speed 2 is identical when starting. After approx. 3 seconds, the blade unit / emulsifying disk rotates more slowly in speed 1 than in speed 2.

Cleaning of the accessories:

- Pre-rinsing: Fill approx. 200 ml of lukewarm water (when using the emulsifying disc) or 400 ml of lukewarm water (when using the blade unit) into the glass container and add one drop of a mild detergent. Operate the appliance on speed 1 for approx. 20 seconds.
- Separate the blade units from each other by turning blade unit A counter-clockwise and detaching it from blade unit B.
- All accessories can be cleaned in warm dishwater. The accessories, apart from the glass container, are dishwasher-safe. Dry the parts well after rinsing.

